

CCMS 1:1

Training Notes


Sixth Grade Team

February 2007

Session One Recap - Introduction to the Tablet PC

Glass Screen – durable for writing and tapping with stylus, but not meant to withstand the chemicals in Windex or other commercial glass cleaners. Use the microfiber cleaning cloth provided to clean the surface of your display. Dampen cloth for heavy cleaning.

Power Lock – slide button to disable power button (useful in tablet mode).

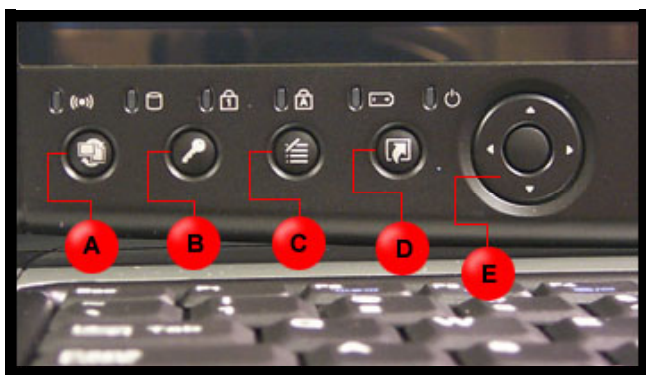


Monitor Hot Keys (from left to right)

- A. Rotate screen
- B. Lock computer (Task Manager)
- C. Windows Journal
- D. Mode (one tap, two taps)
- E. Five-way switch

Session One Recap - Intro to the Tablet PC, continued

Indicators

- A. Wireless (Fn-F2)
- B. Drive (active when blinking)
- C. Number lock (Fn-scroll)
- D. Caps lock
- E. Battery
 - blue=full charge*
 - purple=charging*
 - blinking red=low*
 - solid red=malfuction*
- F. Power

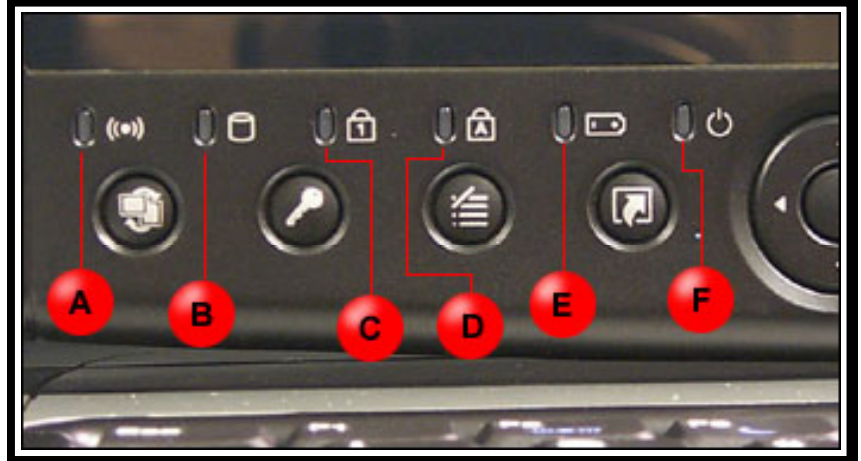

Special Keys

- Windows Key (left side of spacebar) – launches start menu
- Application Key (right side) – launches right click function



Function Keys – blue fn key plus...

- F3 for standby
- F4 for LCD display
- F9-12 for audio controls
- Home, PgUp and PgDn for mute and volume control
- Arrows for display brightness

Notes